



Home Theater

Ever sit down to watch a movie and realize you left the lights on? By adding Control4® lighting, you don't need to worry about getting up. Simply start your movie using the Control4® remote or touchscreen and all the lights can dim down automatically, creating the optimal viewing environment. Need to get up for a snack? Have the lights come back on to a dim level so you can find your way to the kitchen. All this can happen just by turning on your TV or pressing pause.



Suggested System Components:

- Control4® HC-250 or HC-800 Home Controller*
- Control4® Dimmers for home theater lights
- Control4 SR-250 Remote Control or 7" Portable Touch Screen with Camera

* At least one HC-250 or HC-800 Home Controller is required